



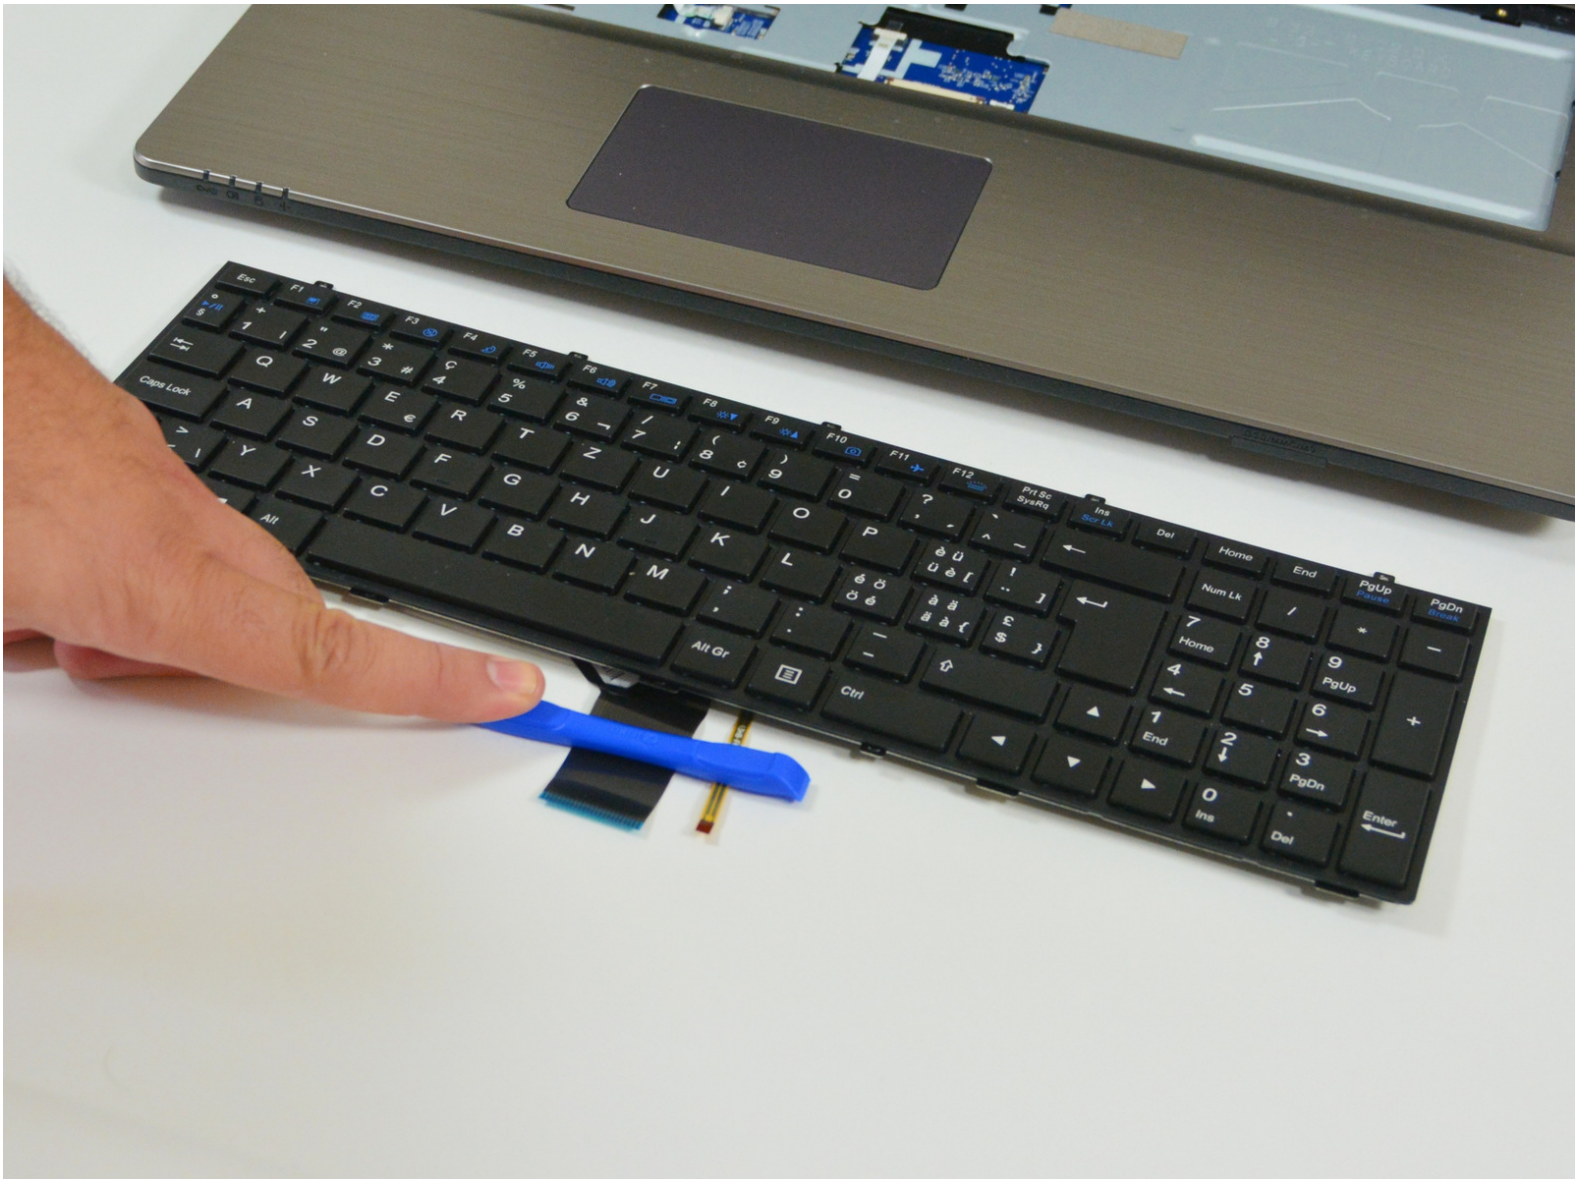


# why! W670SZQ1 Keyboard Replacement

Written By: Felice Suglia





## Step 1 — Battery

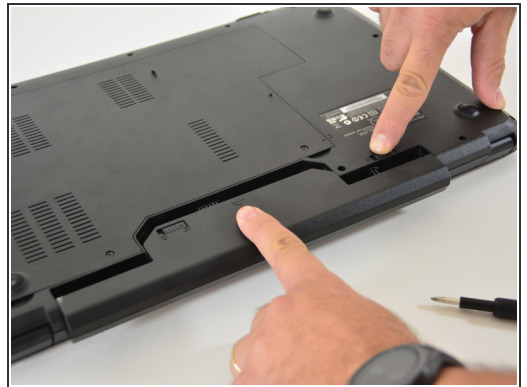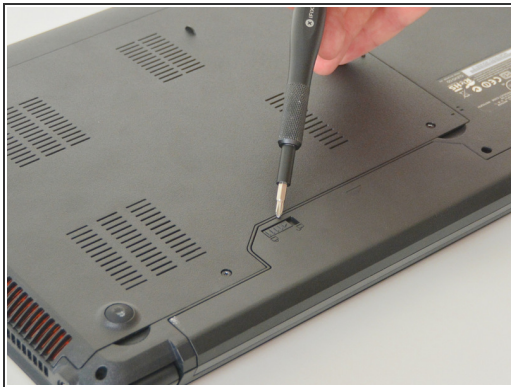

- Unlock the left latch.
- Unlock the right latch.
- Remove the battery while maintaining the unlocked latch.


## Step 2 — Access to the Main Components

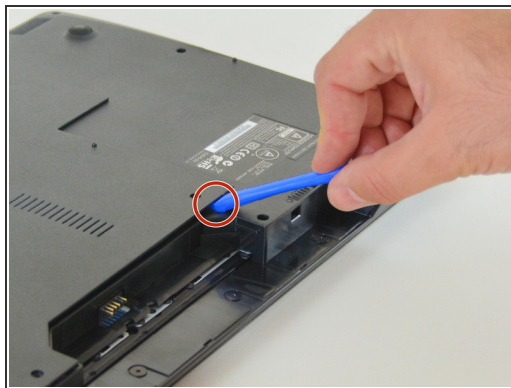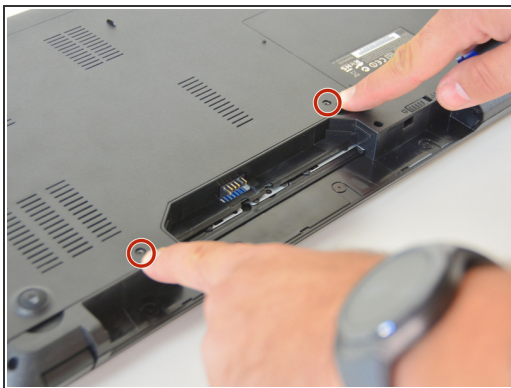

- Using the Philips screwdriver # 0, remove the 2 screws from the bottom cover.
- Lift the bottom right cover with the iFixit Opening Tool.
- Lift the cover lower left with the iFixit Opening Tool.
- Finally completely clear the lower cover to view the main components.



## Step 3 — The keyboard

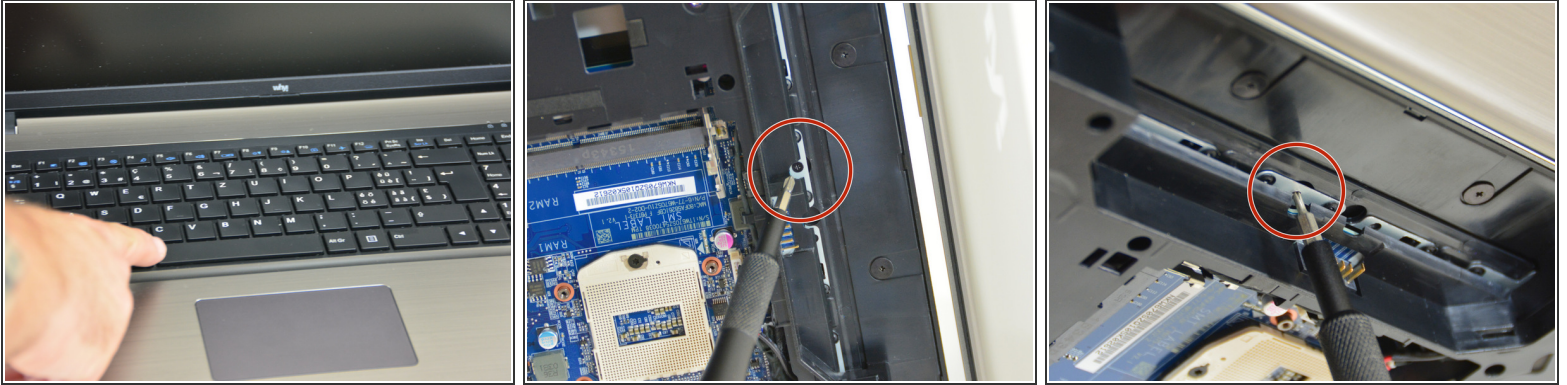


- Once the lower cover is removed you can begin to disassemble the keyboard.
- Start by turning the computer and unscrew the screw shown in the picture 2 of this step.
- Then with the un-clip it screwdriver the bar that hides the keyboard screws.

## Step 4




- Once the bar hiding the key fixing screw is un-clipped we can see the tip of the screwdriver.
- Now locate the 5 keyboard screws.
- Unscrew the 5 screws.

## Step 5

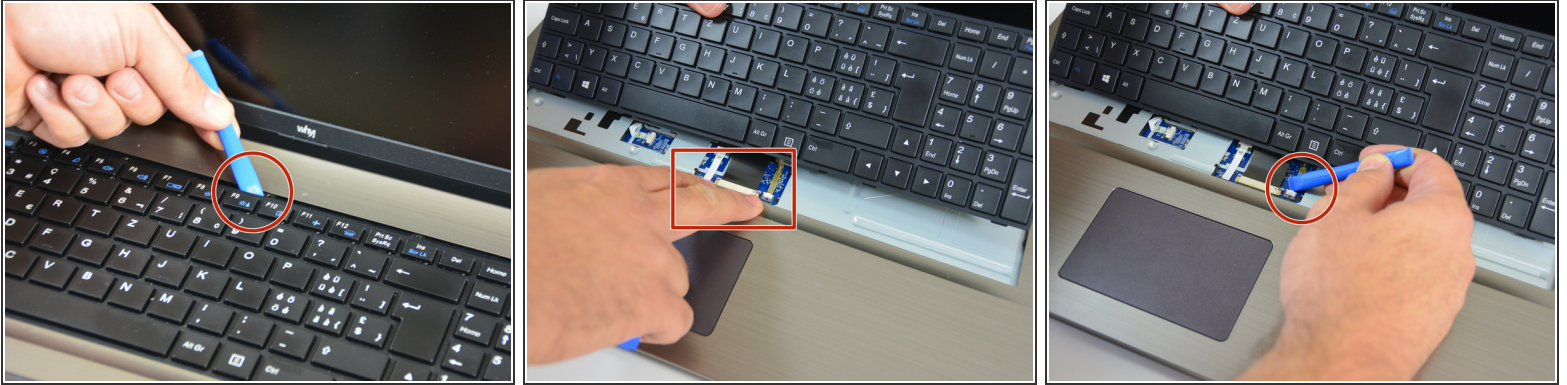

- Now gently raise the keyboard.
- In the old keyboard connection cable and backlight keyboard cable
- Start by unlocking the right connector latch fixing the backlight cable.

## Step 6

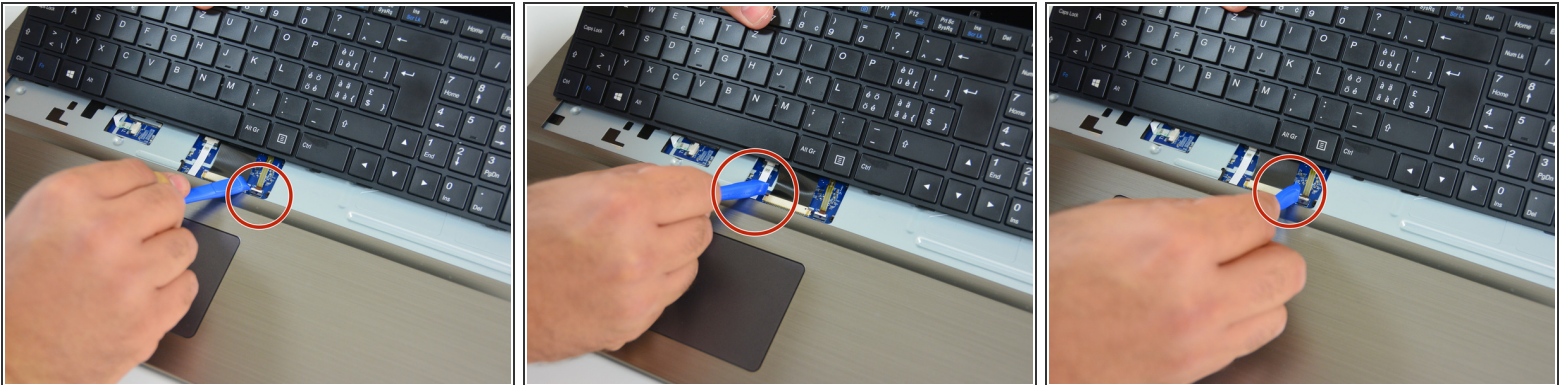

- Then the left.
- Do the same with the left connector latch fixing the main cable.
- Then with the right connector latch fixing the main cable.



## Step 7



- Then remove the keyboard out of the slot.

Pour réassembler votre appareil, suivez les instructions dans l'ordre inverse.

This document was last generated on 2017-06-23 08:31:54 AM.